
Framing Information: 98H Front (Screen & Double Glass)



Framing Dimensions

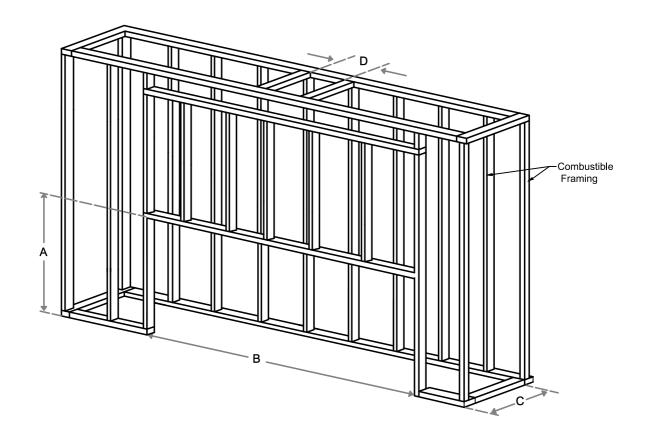

Model	А	В	С	D
98H Front	41 ¹ ½6"	106 ¾ ₆ "	21 %"	Refer to Vent Manufacturer's Firestop Dimensions

Note .1 :Drawings are not to Scale

2. All dimensions in inches

3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.


Framing Information: 98H Front (Screen & Double Glass) Framing Details Nailing flanges fold up and connect to the framing. ALL FRAMING MUST BE SELF-SUPPORTED. The fireplace must not bear any weight. Heat Release Heat Release 5/8" Type X Drywall on Framing Exterior 5/8" Type X Drywall on Framing Exterior Combustible Framing Section View Elevation View Air Intake (required for double glass only) Add drywall nailer as needed. Top View The valve can be moved 36" from the center of the fireplace in any direction

Note .1 :Drawings are not to Scale


2. All dimensions in inches

3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.

Framing Information: 98H Front (Screen & Double Glass) POUR LIFE. YOUR FIRE Fireplace Dimensions Heat Shield Articulation Joints The Company of the Comp

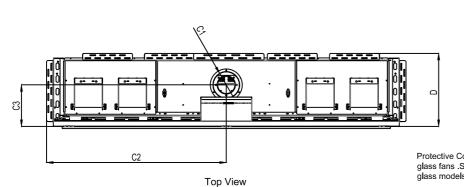

Front View

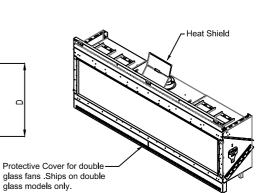

Side View

Model	(H) Height	(W) Width	(D) Depth	C1	C2	СЗ	Viewing Area	
Woder							Front	Side
98H Front	41 ¹ ½ ₁₆ "	106 ¾ ₆ "	21 %"	7 %"	53 1/4"	12 ½ ₆ "	97 ¾ ₆ " W X 21 ½" H	_

Note: 1. Drawings are not to Scale

2. All dimensions in inches